

Painted Fixtures

CLEANING & CARE

CLEANING & CARE GUIDELINES FOR PAINTED FIXTURES

Our acrylic topcoat is designed for excellent durability in active retail environments. To keep your fixtures looking their best, we recommend the following for routine care:

- Use a soft, non-abrasive cloth
- Clean using warm water and a small amount of mild liquid dish soap (such as Dawn®)
- Wipe surfaces gently to remove dust, fingerprints, and light soils
- Dry immediately with a clean, lint-free cloth to prevent water spots or residue

To protect the finish integrity, do not use:

- Abrasive pads, scrub brushes, or scouring powders
- Harsh or industrial chemicals
- Bleach or chlorine-based cleaners
- Solvents such as acetone, lacquer thinner, or mineral spirits
- Steam cleaning or high-pressure methods

These products can damage the surface, reduce sheen, or cause discoloration.

Care Tips

- Do not allow cleaners or water to pool or sit on the surface
- Protect surfaces from sharp objects and dragging items across them
- Maintain a regular cleaning schedule to reduce buildup

